

UNITECH SCALES AND MEASUREMENTS PVT. LTD.

Measurement Lab [Transducer Lab] -

Resistance Measurement Trainer



www.unitechscales.com

E-mail: - support@unitechscales.com; sales@unitechscales.com

Mobile no : - +91-98452 22919 (Mr. Prasanna Kumar N.M) Mobile no : - +91-98450 70453 (Mr. Keshava Murthy M.N)

Phone no: - +91-80-2836 6999 | Fax no: - +91-80-2836 6745

Resistance Measurement Trainer comprises of potentiometer to vary the resistance with respect to the angular displacement with digital indicator to read the resistance change in the potentiometer.

Model : UITM-091[Linear displacement]

Model : UITM-092[Angular Displacement]

Resistance Source : Linear Variable resistor 10K ohm single turn potentiometer

Displacement : UITM-091-0-25mm

: UITM-092-0-270°

Indicator : $3\frac{1}{2}$ digit to read ± 1999 counts.

Resolution : 1mm 1°

Power Supply : $2.3V \pm 10\%$ @50 Hz